 



A line drawing of a mobile phone. A label 'Channel' points to a small, textured circular button on the top right. A label 'Speaker' points to a horizontal slot on the front face, below the screen area.

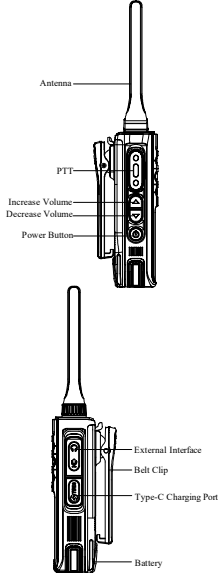


Please carefully open the packaging box and verify that it contains the items listed in the table below. If any items are missing or damaged, please contact your dealer promptly.

SN	Material Name	Quantity
1	Walkie-talkie	1
2	Charging Power Adapter	1
3	Power Cord	1
4	Battery	1
5	Belt Clip	1
6	Antenna	1
7	Lanyard	1
8	Certification of Conformity	1
9	User Manual	1
10	Charging Base (Optional)	1

 1. Plug the charging power adapter into a suitable AC power outlet.
2. Lift the USB cover on the bottom side of the accessory cover, connect one end of the USB cable to the power adapter, and plug the other end into the TYPE-C port on the right side of the terminal. The blue indicator light turns on to start charging (please charge with the device off).
3. After about 4 hours of charging, the blue indicator light turns off, indicating the battery is fully charged.
4. Remove the charging power adapter from the AC power outlet.



 1. Plug the dock charger power adapter into a suitable AC power outlet.
2. Insert the walkie-talkie into the charging dock; the blue indicator light turns on to start charging (please charge with the device off).
3. After about 4 hours of charging, the blue indicator light turns off, indicating the battery is fully charged.
4. Remove the dock charger power adapter from the AC power outlet.

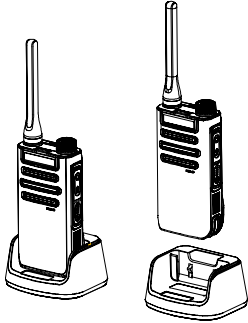


1. The Walkie-talkie battery is not charged when it leaves the factory. Please charge the battery before the first use.
2. When charging the walkie-talkie with the battery, please turn off the walkie-talkie.
3. For a new battery's first charge or a battery that has been stored for a long time (over 2 months), it should be charged several times to reach normal capacity. Ensure that the battery is charged at least once every three months.




167W06000504

 1. Align the top of the battery with the battery installation position on the back of the walkie-talkie, and insert the battery.
2. Press the battery down and push the battery cover downwards until you hear a "click" sound, ensuring the battery latch is in the correct position.

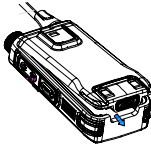


 1. Press the bottom **【PUSH】** latch of the battery.
2. Once the battery is loosened, it can be removed.

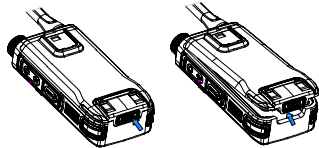


1. Do not short-circuit the battery terminals or dispose of the battery in fire.
2. Do not disassemble the battery casing on your own.

 1. For installation, insert the threaded end of the antenna into the antenna port at the top of the walkie-talkie, and rotate it clockwise until it is tight.
2. To remove the antenna, rotate it counterclockwise.

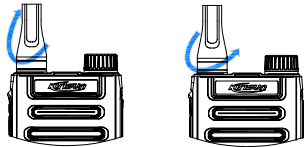

1. Flatten the belt clip bracket.
2. Align the raised rib on the back of the main unit's battery cover with the notch in the belt clip bracket.
3. Push the belt clip downward until you hear a "click" sound, indicating the belt clip is properly installed.

 1. Lift the spring latch on the belt clip bracket upwards to release it from the slot.
2. Push the belt clip upward to slide it out of the slot on top of the battery cover.
3. Remove the belt clip.



In the off state, press and hold the [Power] button for 5 seconds until you hear the announcement "Welcome to use", indicating successful power on.

In the on state, press and hold the [Power] button for 5 seconds until you hear the announcement "Off", indicating the device is turned off.

2. **Selecting a Channel**
In standby mode, rotate the [Channel Knob] to select the desired channel.
3. **Adjusting Volume**
To increase volume: Briefly press the side [▲] button to raise the volume, accompanied by a volume prompt sound from the speaker.
To decrease volume: Briefly press the side [▼] button to lower the volume, accompanied by a volume prompt sound from the speaker.
4. **One-Click Frequency Matching Mode**

- (1) Take down the antenna of "sub-telephone", press and hold the Power button and the side UP key until you hear "welcome to use", reporting the current channel, and then you hear a "dip" sound, the green light flashes once every 0.5 second, indicating entering the "Frequency matching mode".
- (2) Keep the walkie-talkie (mother telephone) to be intercommunicated 10 cm or less away from the "sub-telephone", and press and hold the Launch button until the frequency matching is successful and the green light of the "sub-telephone" is always on, the current channel number will be reported, at the moment, you can talk to each other.
- (3) When switching to other channels, just operate according to Step 2, then shut down and restart it to put an end to the frequency matching.

Note: If the operation of Step 2 fails, please switch the channel and try again.

- Press the [PTT] key to initiate a call, then speak into the microphone using a normal voice tone. Keep the microphone about 3 to 5 centimeters from your lips for optimal sound quality. Release the [PTT] key to switch the walkie-talkie to receive mode.

Indicator Light Status	Walkie-talkie Operating Status
Red Light On	Transmitting
Green Light On	Receiving signal.
Blue Light On	Charging the battery

SN	Failure Symptoms	Causes of Failure and Troubleshooting Methods
1	Won't Turn On	① Battery is dead: Please charge with a data cable or replace with a new battery. ② Faulty switch or other issues: Please visit a designated repair station for repair.
2	Low Volume in Walkie-talkie	① Speaking too far from the microphone: Optimal distance is 3-10cm. ② Incorrect volume setting: Increase the volume.
3	Unable to Intercom	① Incorrect channel parameter settings: Reset the parameters and try again. ② Check if the antenna is properly installed. ③ Exceeded the communication range of the device.

Kirisun Corporation introduces the "Golden Sunshine Service" policy, solemnly launching the following service commitments:

1. Kirusun products are warranted for 12 months for the main unit from the date of sale (based on the warranty card or invoice).
- Accessories are warranted for 6 months; if there are no special agreements, the national warranty laws apply.

11. If the purchased main unit and accessories encounter non-human-made quality issues during the warranty period, customers can enjoy free warranty services at Kirisun Customer Service Center or its authorized service stations with the warranty card or invoice.

The following information should be completely filled out by the sales unit to assist the user: <Customer Retention Copy>

Model:
Customer:
Purchase Date:
Customer Address:
Sales Unit Contact Person:
Name of Sales Unit (Valid with Stamp)

Name:
Tel:
Postal Code:
Tel:

Kirisun Corporation introduces the "Golden Sunshine Service" policy, solemnly launching the following service commitments:

1. Kirusun products are warranted for 12 months for the main unit from the date of sale (based on the warranty card or invoice).
Accessories are warranted for 6 months; if there are no special agreements, the national warranty laws apply.

II. If the purchased main unit and accessories encounter non-human-made quality issues during the warranty period, customers can enjoy free warranty services at Kirisun Customer Service Center or its authorized service stations with the warranty card or invoice.

The following information should be completely filled out by the sales unit to assist the user:

Name: _____
 Title: _____
 Postal Code: _____
 City: _____

Finished size: 155 x 88 mm